



IQOS 3 DUO Pocket Charger*

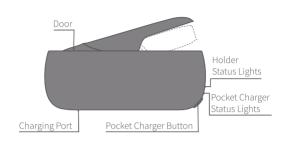

IQOS 3 DUO Holder*

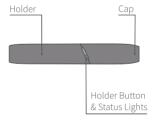

Charging and Cleaning



Power Adaptor



IQOS Cleaning Tool



Charging Cable



IQOS Cleaning Sticks



For the full user guide and Support for IQOS users, visit www.iqos.com/myiqos


Register your device to benefit from extended care and support.

FEATURES & SETTINGS

Personalize your IQOS experience with the IQOS app*. For more information and installation please visit: www.iqos.com/iqos-app


 IQOS app may not be available in your country.

Getting Started



TURN ON

Press and hold IQOS 3 DUO Pocket Charger Button for 4 seconds, then release; Holder Status Lights and Pocket Charger Status Lights will turn on slowly.



CHARGE HOLDER

Insert IQOS 3 DUO Holder into the IQOS 3 DUO Pocket Charger, then close door to charge.

Holder Status Light will show Holder charge level.

Check Holder Status



CHECK HOLDER STATUS

Press and release the Holder Button to check status.

Holder Lights indicate IQOS 3 DUO Holder battery level.



CHECK HOLDER STATUS ON IQOS 3 DUO POCKET CHARGER


Press and release Pocket Charger Button to check IQOS 3 DUO Holder battery level.



CHECK HOLDER STATUS ON IQOS 3 POCKET CHARGER


Press and release Pocket Charger Button to check IQOS 3 DUO Holder battery level.

How to use your IQOS 3 DUO



1. INSERT HEATSTICK™

Insert and gently press the HeatStick to the line on filter with filter facing outside.



2. START HEATING

Press Holder Button until IQOS 3 DUO Holder vibrates and Light(s) pulses white.



3. BEGIN USE


Start using once IQOS 3 DUO Holder vibrates twice.



4. NEARLY COMPLETE


To signal the last 30 seconds or last 2 puffs, IQOS 3 DUO Holder will vibrate twice with Light(s) pulsing white.

How to use your IQOS 3 DUO



5. REMOVE HEATSTICK
Slide Cap upward and then
remove used HeatStick

How to clean Holder





1. USE IQOS CLEANING TOOL

Slide Cap upward and remove completely.

Wait for device to cool down, insert IQOS Cleaning Tool and rotate gently.




2. USE IQOS CLEANING STICK

Insert IQOS Cleaning Stick to wipe inside of the holder.

Do not touch the blade with the IQOS Cleaning Stick.

Quick Tips



CHECK POCKET CHARGER STATUS

Press and release Pocket Charger Button, to check battery level.


Lights will turn on to indicate battery status.



TO RESET


Press Pocket Charger Button until lights fade out, then release.

All Status Lights will turn OFF, blink twice, and progressively fade in, to confirm a RESET.



LIGHTS BLINK WHITE TWICE

IQOS is outside operating temperature range (0°C-40°C) or Holder needs to be inserted in Pocket Charger with door closed till it is fully charged.



LIGHT BLINKS RED

Reset IQOS 3 DUO. If red light blinking persists, contact Customer Care.





This is the safety alert symbol. It is used to alert you to potential physical injury hazards.

SAFETY WARNINGS AND INSTRUCTIONS

PLEASE READ ALL SAFETY WARNINGS AND INSTRUCTIONS BEFORE

These safety warnings and instructions cannot cover all possible conditions that could occur and users should exercise care and caution

Keep these safety warnings and instructions for future reference as they contain important information.

Intended Users

- · IOOS and HeatSticks are for adult use only.
- IQOS and HeatSticks are intended for use by current adult smokers who would otherwise continue to smoke.
- Children and adolescents should never use IQOS or HeatSticks under any circumstances.
- IQOS or HeatSticks should not be used by people with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning their use and understand the risks involved.

Tobacco and Nicotine

- · HeatSticks contain nicotine, which is addictive.
- IQOS and HeatSticks are not risk-free. The best way to reduce tobacco-related health risks is to quit tobacco and nicotine use altogether.
- Some users of IQOS and HeatSticks reported experiencing abdominal pain, chest pain, choking sensation, cough, difficulty breathing, dizziness, dry mouth, dry throat, gingivitis, headache, malaise, nasal stuffiness, nausea, mouth irritation, palpitations, throat irritation, and vomiting.
- Nicotine-containing products should not be used by people who have or are at risk of heart disease, are diabetic, are epileptic, or are experiencing seizures.
 Nicotine-containing products can be used during programmer and the products of the pr
- Nicotine-containing products should not be used during pregnancy or while breastfeeding. If you are pregnant, breastfeeding, or think you may be pregnant, you should quit tobacco and nicotine use altogether.
- Stopping smoking or switching to IQOS and HeatSticks or other nicotine-containing products may require the adjustment of the dosing of certain medicines (e.g. theophylline, clozapine, ropinirole).
- If you have questions about whether you should use IQOS and HeatSticks given an
 existing health condition, consult a health care professional.

▲ IMPORTANT SAFETY INFORMATION

▲ WARNING Choking, Ingestion and Handling Hazard

- Keep IOOS and HeatSticks out of reach of children at all times.
- CHOKING HAZARD IQOS™ device, accessories, and HEETS™ tobacco sticks contain small parts.
- INGESTION HAZARD If a HeatStick is swallowed, seek medical attention immediately
 due to risk of nicotine intoxication.

Electronic Risks

Failure to follow these Safety Warnings and Instructions could result in fire, explosion, electric shock, injury, or damage to the product or other property:

- Only Intended Users should use IQOS.
- Only charge the IQOS Pocket Charger with the approved IQOS Power Adaptor model supplied in the box or available from your local or online IQOS stores for charging purposes. See the Technical Data section of this User Guide for a list of approved IQOS Power Adaptor models.
- Do not use third-party accessories with IQOS.
- Only charge the IQOS Pocket Charger using Safety Extra Low Voltage. See the Technical Data section of this User Guide for details on voltage.
- Do not use IQOS where the use of electronic devices is prohibited
- Only charge the IQOS Pocket Charger indoors as indicated by the symbol △.
- Do not use IQOS or charge the IQOS Pocket Charger and/ or IQOS accessories if they are damaged, tampered with, or broken.
- Do not use IQOS if its batteries appear to be leaking.
- Do not use, charge, or store IQOS in places with high temperature (such as inside a car in summer, or near heat sources such as radiators or fireplaces).
- Do not use IQOS where flammable materials, liquids and pases are present.
- Never immerse or put IQOS or its accessories in contact with water and/or other liquids. Do not touch IQOS and/or its accessories if they become wet or immersed in any liquid.

- Never dispose of IQOS and/or its accessories with other household waste, as it may come into contact with water and/or other liquids.
- Clean the USB charging port on the IQOS Pocket Charger periodically to avoid accumulation of foreign matters (such as dust particles), and inspect USB port for foreign materials before using USB connector.
- Disconnect IQOS and/or its accessories from any source of power if it overheats, fumes, ignites, or burns while charging.
- Do not touch IQOS and/or its accessories if they do overheat, fume, ignite, or burn.
- Handle with care. Do not drop IQOS or subject it to strong shock
- Do not attempt to open, service, modify, or repair any component of IQOS, or to replace any of the components or batteries
- Only use IQOS in ambient temperatures between 0° and 40° C.

Battery Risks

IQOS is powered with sealed lithium-ion (Li-on) batteries. Under normal conditions of use, the battery is sealed.

If fluid from leaked battery is swallowed, seek medical attention immediately. Do not

- induce vomiting or ingest food or drink.
- · If vapor from leaked battery liquid is inhaled, get fresh air and seek medical attention.
- If fluid from leaked battery is in contact with skin, wash hands and do not touch eyes.
- If fluid from leaked battery comes into contact with eyes, immediately flush with running water for at least 15 minutes and seek medical attention immediately.

▲ CAUTION THERMAL BURN RISK

Failure to follow these Safety Warnings and Instructions could result in thermal burns:

- · Store IQOS and HeatSticks in a clean, dry, cool place.
- Do not expose IOOS and HeatSticks to high humidity conditions or direct sunlight.
- Do not use HeatSticks that have been exposed to excessive heat or moisture.
- Do not remove a HeatStick while in use.
- · Never attempt to touch the IQOS heating blade.
- Never use IQOS™ Holder without Holder cap.

A CAUTION ALLERGIC REACTION RISK

- Using IQOS and HeatSticks could cause an allergic reaction, such as swelling of the face, lips, tongue, gums, throat, or body, difficulty breathing, or wheezing.
- Stop using IQOS and HeatSticks and seek medical attention immediately if you experience
 any of the symptoms listed above, as they may indicate a serious allergic reaction.

EXCLUSIVE USE OF HEATSTICKS

- · Only purchase IOOS and HeatSticks from your local or online IOOS stores or other
- Only use IOOS with HeatSticks. Never use IOOS with a cigarette or similar products that are not approved for usage with IOOS. Doing so may result in injury.
- Do not modify HeatSticks in any way or add any substance to HeatSticks. Doing so may

Reporting of adverse experiences

- If you experience any unwanted health effect when using IOOS and/or HeatSticks consult a health care professional.
- You can report any adverse experience or incident directly by contacting your local Call Centre (details can be found in the Customer Care & Warranty booklet). By reporting adverse experiences or incidents, you can help provide more information on the safety

which indicates the IOOS Pocket Charger can only be charged using one of the

· For more information, please go to www.igos.com

TECHNICAL DATA

IOOS 3 Model A1404/ IOOS 3 DUO Model A1406 Battery type: Input: 5V === 1.6A

Pocket Charger: IOOS 3 Model A1504/ Battery type: Input: 5V === 2A

Bluetooth® 4.1 The IOOS Pocket Charger is marked with the symbol DHG followed by "SxxA2x".

IOOS AC Power Adaptor

approved IOOS Power Adaptor models listed below. Model: S52A21, S21A20, S21A22, S21A23, S21A25. S21A27

Input: 100V-240V~ 50-60Hz 0.3A Output: 5.0V === 2.0A Output power: 10.0W Average active efficiency: 79.0%

No load power consumption: <0.09 W

USB Type C Cable

INFORMATION ON DISPOSAL OF IQOS

Valid across European Union and EFTA

This symbol on the product or on its packaging indicates that this product and its individual parts (including batteries) must not be disposed of with your other individual parts (including patients) must not be dispose of your waste household waste. Instead, it is your responsibility to dispose of your waste equipment by handing it over to a designated collection point for the recycling of

waste electrical and electronic equipment. Batteries that are not encased in the waste equipment must be separated from it and disposed of separately before being handed in at a collection point. In addition, waste batteries can be returned free of charge at the point of sale. The deletion of any personal data on the waste equipment is your responsibility.

Reuse, recycling, and other forms of recovery

The separate collection and recycling of your waste equipment (including batteries) at the time of disposal will help to conserve natural resources and ensure that it is recycled in a manner that protects human health and the environment. Disposing of waste equipment as unsorted municipal waste (e.g. destined for waste incineration or landfilling) can have negative effects on the environment and human health.

Owners of waste equipment can hand them in, within the framework of the possibilities, for the return or collection of waste equipment provided by public waste management authorities, so that a correct disposal of the old devices is ensured. For more information about where you can drop off your waste equipment for recycling, please contact your local household waste disposal service or the shop where you purchased the product.

For Switzerland:

Owners of waste equipment and batteries purchased from Philip Morris Switzerland Sàrl may return them free of charge to any IOOS Boutique in Switzerland.

BATTERY REMOVAL INSTRUCTIONS (FOR DISPOSAL AND RECYCLING)

Batteries must not be removed by the consumer. At end of product life, only an authorised recycler may safely remove batteries by using the following steps.

IQOS 3 DUO Pocket Charger (A1505):

Step 1: The device should be fully discharged before disassembling it. Remove the cover, then remove the screw on both sides.

- Step 2: Detach the charger from the hull.
- Step 3: Unscrew to remove the retainer.
- Step 4: Detach all FPC and connector to remove the charger PCB.
- Step 5: Remove battery and dispose of according to local regulations.

IOOS 3 DUO Holder (A1406):

- Step 1: The device should be fully discharged before disassembling it. Remove the front housing from the holder.
- Step 2: Remove the rear housing.
- Step 3: Remove the power button from the holder.
- Step 4: Remove the glue and solder to detach the battery from the middle part and frame. Middle part must be cut open due to glue.
 - tep 5: Remove battery and dispose of according to local regulations

Hereby, Philip Morris Products S.A. declares that IQOS 3 DUO is in compliance with the essential requirements and other relevant provisions of Directive 2014/53/EU. The official Declaration of Conformity may be found at: www.pmi.com/declarationofconformity

IQOS 3 DUO Model A1505 operates within the 2.402 – 2.480GHz frequency band with a maximum RF output power below 10.0 dBm. IQOS 3 DUO Model A1505 is equipped with a passive NFC tag that operates at 13.56MHz frequency band.

Designed and manufactured under the authority of Philip Morris Products S.A., Quai Jeanrenaud 3, 2000 Neuchâtel, Switzerland.



The Bluetooth® word mark and logos are registered trademarks owned by the Bluetooth SIG, Inc. and any use of such marks by Philip Morris Products S.A. and its affiliates is under license.

